

# SP103E Mini-RF 遥控控制器使用说明

### 一、特点:

- 1、RF 射频无线控制, 距离可达 15M, 操作灵敏人性化, 体积小巧, 接线简单方便;
- 2、支持定制市面上常见的单线或双线的 LED 驱动 IC;
- 3、自带 300 种花样效果, 炫丽灵动;
- 4、可调节级联点数,最多可带多达 2048 个像素点;
- 5、带掉电保存功能;
- 6、带灰度调节功能;
- 7、电源具有防反接功能。

### 二、遥控器部分:

1、按键:



0	АИТО	SPEED	SPEED	MODE	MODE	×	*	6	<b>②</b>	R	G	В	w
开关	自动	速度加	速度减	模式加	模式减	亮度加	亮度减	配对	设置	红	绿	蓝	白

#### 2、按键操作:

灯具测试功能	连续按 <b>自动键</b> 5 次,次直到灯具熄灭,放开 AUTO 键,跳转到红、绿、蓝、黄、紫、青、白七色跳变效果,方便灯具测试;
遥控器配对功能	连续按 <b>配对键</b> 5 次,灯具快闪白光,此时接遥控板与接收器进行一对一配对,连续按配对键 5 次,灯具慢闪白光,此时接遥控板与接收器解绑;
调节 RGB 顺序	由于灯具的差异,遥控面板的 RGB 按键与实际灯具对应不上,此时可调节 RGB 顺序;连续按 <b>设置键</b> 5 次,灯具此时闪动一次白光后常亮白光,按 <b>红色键</b> 直到灯具亮红色,按 <b>绿色键</b> 直到灯具亮绿色,按 <b>蓝色键</b> 直到灯具亮蓝色,最后按 <b>设置键</b> 1 次确认设置完成;
调节级联点数	本控制器出厂默认控制 600 个点,最多可调节至 2048 个点,最少可调节至 300 个点。连续按 <b>设置键</b> 5 次,灯具闪动一次白光后常亮白光,按 <b>模式</b> +键和 <b>模式-</b> 键来增加或减少点数,每按一次就增加或减少 60 个点,最后按 <b>设置键</b> 1 次确认设置完成;
抓取效果功能	在当前是全部效果自动循环模式时,按下 <b>设置键</b> 1次,接着按 <b>配对键</b> 1次,可抓取当前效果使之循环跑动。

## 三、接收部分

- 支持定制市面上常见的单线或双线的 LED 驱动 IC;
- 本产品可选择 5V 供电和 12V 两种供电电压。
- 注意: 上电使用前请确认供电电压。

## SP103E Mini-RF controller operating instructions

#### 1. Features:

- 1. RF Remote control,long distance,mini size,wire connection is simple and very easy to use;
- 2. Support almost every kind of one-wire or two-wire LED-DRIVER-IC ;(Can be customized)
- 3. With 300 kinds of patterns, which are vivid and beautiful;
- 4. Each controller can control up to 2048 pixels;
- 5. With user setting saving functionality;
- 6. Brightness adjustable.
- 7. Preventing reverse connection of power supply.

#### 2. Remote Controller

1. Functions Of Each Button:



0	АИТО	SPEED +	SPEED	MODE +	MODE	*	*	6	<b>©</b>	R	G	В	W
ON/OFF	AUTO	SPEED UP	SPEED DOWN	MODE UP	MODE DOWN	BRIGHTNESS UP	BRIGHTNESS DOWN	МАТСН	SETTING	RED	GREEN	BLUE	WHITE

### 2.Usages:

Testing	Continuously pressing the <b>AUTO</b> button 5 times until LED is off, release the <b>AUTO</b> button to into the mode of switch in red,green,blue,yellow,purple,cyan and white,witch can test the your LED.
Matching	Continuously pressing the MATCH button 5 times until LED flash in white quickly to match the Remote control with the receiving controller. Pressing the MATCH button for 5 times till LED flash in white slowly to un-match;
Reorder RGB	Differ from kinds of LED, The <b>R G B</b> keys may don't perfectly match to your LED, Reorder them if needed. Continuously pressing the <b>SETTING</b> button 5 times until LED flash in white once and then turn into all white, Pressing the <b>R</b> button until LED is red, Pressing the <b>G</b> button until LED is green, pressing the <b>B</b> button till LED is blue, then press the <b>SETTING</b> button once to confirm your setting;
Adjust Num of pixels	The factory default setting of the number of controlled pixel is 600. Continuously pressing the <b>SETTING</b> button 5 times until LED flash once and turn all white, pressing <b>MODE</b> + to add pixels ,pressing <b>MODE</b> - to decrease pixels,(each pressing add or decrease 60 pixels) then press the <b>SETTING</b> button to confirm your setting; Can be regulated to up to 2048 pixels, The minimum number is 300 pixels.
Catching	When in the AUTO mode, pressing the <b>SETTING</b> button once, and then press <b>MATCH</b> button once to catch the Current pattern to stay and operate circularly.

### 3. Receiving Controller:

- Can be customized to support almost every kind of one-wire or two-wire LED-DRIVER-IC;
- The receiver controller has two kinds of working voltage :5V-supply-voltage or 12V-supply-voltage;
- Cautions: Please make sure the power supply voltage is match to your controller before you power it.